

Spreader settings and application rates

Landscaper Pro 11-5-5+8Fe (Shade Special)

Applicable for the following ICL spreaders: **AccuPro 2000, SR-2000**

	Cone setting	Spread width	Rate and Setting					
			15 g/m ²	20 g/m ²	25 g/m ²	30 g/m ²	35 g/m ²	40 g/m ²
Single Pass	6	3,7 m	J½	K½	L	M	N	
Double Pass (half rate)	6	3,7 m		I	J	J½	K	K½

Applicable for the following ICL spreaders: **AccuPro One**

	Slider plate	Spread width	Rate and Setting					
			15 g/m ²	20 g/m ²	25 g/m ²	30 g/m ²	35 g/m ²	40 g/m ²
Single Pass	Open	2 m		9	10	11		
Double Pass (half rate)	Open	2 m		7		8		

The spreader settings are guidelines only. The spreader should be calibrated prior to application to ensure accuracy. The spreader settings are based on a walking speed of 5 km/hour. Walking faster or slower than 5 km/hour will alter the spread width and application rate. Exact rates are dependent upon the spreader itself and the accuracy of the person operating it.