

# Spreader settings and application rates

## Landscaper Pro

20-20-8 (New Grass) | 24-5-8+2MgO (Allround)

Applicable for the following ICL spreaders: **AccuPro 2000, SR-2000**

	Cone setting	Spread width	Rate and Setting					
			20 g/m <sup>2</sup>	25 g/m <sup>2</sup>	30 g/m <sup>2</sup>	35 g/m <sup>2</sup>	40 g/m <sup>2</sup>	45 g/m <sup>2</sup>
Single Pass	4	4,8 m	N	O	P	R	S	T
Double Pass (half rate)	4	4,8 m		L	M	M½	N	N½

Applicable for the following ICL spreaders: **AccuPro One**

	Slider plate	Spread width	Rate and Setting					
			20 g/m <sup>2</sup>	25 g/m <sup>2</sup>	30 g/m <sup>2</sup>	35 g/m <sup>2</sup>	40 g/m <sup>2</sup>	45 g/m <sup>2</sup>
Single Pass	Closed	2 m		13	14	15	16	
Double Pass (half rate)	Closed	2 m		10		11	12	

The spreader settings are guidelines only. The spreader should be calibrated prior to application to ensure accuracy. The spreader settings are based on a walking speed of 5 km/hour. Walking faster or slower than 5 km/hour will alter the spread width and application rate. Exact rates are dependent upon the spreader itself and the accuracy of the person operating it.