

Spreader settings and application rates

Landscaper Pro

16-6-23+2MgO (Pre-Winter) | 15-0-26+4MgO (Stress Control) | 16-25-12 (New Grass)

Applicable for the following ICL spreaders: **AccuPro 2000, SR-2000**

| | Cone setting | Spread width | Rate and Setting | | | | | |
|-------------------------|--------------|--------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|
| | | | 25 g/m ² | 30 g/m ² | 35 g/m ² | 40 g/m ² | 45 g/m ² | 50 g/m ² |
| Single Pass | 4 | 4,7 m | Q | R½ | T½ | V | X | Q(x2) |
| Double Pass (half rate) | 4 | 4,7 m | M | N | O | O½ | P | Q |

Applicable for the following ICL spreaders: **AccuPro One**

| | Slider plate | Spread width | Rate and Setting | | | | | |
|-------------------------|--------------|--------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|
| | | | 20 g/m ² | 25 g/m ² | 30 g/m ² | 35 g/m ² | 40 g/m ² | 45 g/m ² |
| Single Pass | Closed | 2,5 m | | | 14 | 16 | 18 | |
| Double Pass (half rate) | Closed | 2,5 m | | | 9 | 10 | 11 | |

The spreader settings are guidelines only. The spreader should be calibrated prior to application to ensure accuracy. The spreader settings are based on a walking speed of 5 km/hour. Walking faster or slower than 5 km/hour will alter the spread width and application rate. Exact rates are dependent upon the spreader itself and the accuracy of the person operating it.